














Part #: PT398-21111

NOTE: Part number of this accessory may not be the same as the part number shown.

Conflicts:

Do not install into Manual Transmission Vehicles or Vehicles without RKE systems.

Kit Contents

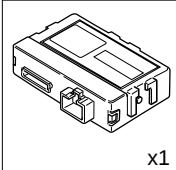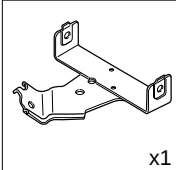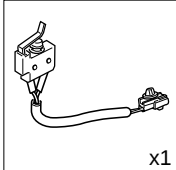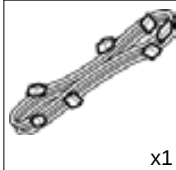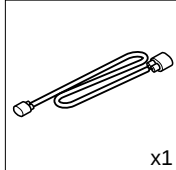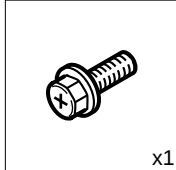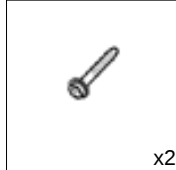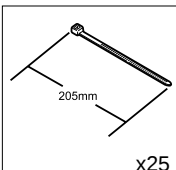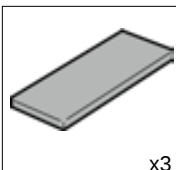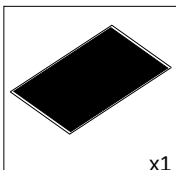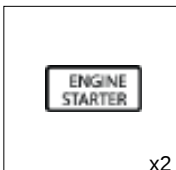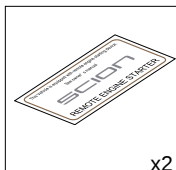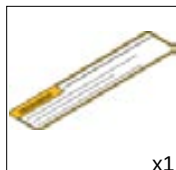RES ECU  x1 PT398-21111-NS	RES ECU Bracket  x1	Hood Switch  x1 PT398-00070-HS	V4 Harness  x1	Hood Switch Sub- Harness  x1	Bolt  x1 91651-60618	Hood Switch Screw  x2 90167-20001
Wire Tie  x25 205mm	Foam Tape  x3	Protective Sheet  x1	Remote Label  x2 08192-07820	Key Tag  x2 PT398-2109E	Window Label  x2 PT398-00071-EL	Engine Room Label  x1 PT398-00070-EL
Owner's Guide  x1						

Service Part #'s

Additional Items

(may be required)

Item#	Description

Recommended Sequence of Application

Item#	Description
1	TVIP V4 Remote Engine Starter
2	TVIP V5 RS3200 PLUS
3	Hands Free BLU Logic
4	Audio / Navigation Unit

Recommended Tools

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Vehicle Protection	Blankets, Parts Boxes
Special Tools	
Techstream	Version 4.1 or later
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's, Phillips Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Torque Wrench	Battery: 36 in•lbf (4.07 N•m) Hood Latch: 70.8 in•lbf (8.0 N•m) Driver's Knee Airbag: 88.5 in•lbf (10 N•m)
Tape	Clear, Electrical
Socket	10mm, extension
Pliers	Needle Nose
Utility Knife or Scissors	
Ruler	
Special Chemicals	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

Table of Contents

I. Preparation	1–4
1. Table of Contents	2
2. Wire Routing Overview	3-4
II. Procedure	5–41
1. Preparation.	5
2. V4 Harness Preparation. (Vehicles Without Immobilizer)	6
3. Hood Switch Installation.....	7
4. Disassembly.....	11
5. V4 Harness Installation. (Steering Area and Driver's Side)	14
6. RES ECU Preparation and Installation.	23
7. V4 Harness Installation. (Driver's Side).	25
8. V4 Harness Installation. (Driver's Side ~ Center Area).....	27
9. Reassembly.....	30
10. Registration Preparation.	31
11. Registration. (Vehicles Without Immobilizer)	32
12. Registration. (Vehicles With Immobilizer)	34
13. Tags and Labels.....	40
14. Complete the Installation.	41
III. Checklist	42–44
1. Accessory Function Checks.....	42
2. Vehicle Function Checks.....	43

Legend



Do not proceed until process has been completed.



Follow steps carefully to avoid damaging the Vehicle or Accessory



Use caution to avoid injury.



Used in Figures to call attention to specific tools recommended for the process.



Highlights a change in installation with respect to previous issue.



Indicates that torque is related to safety.



Video available; click to play.



Wire Tie location and number.

Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the “Accessory Installation Practices” document.


This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your SCION dealer for a copy of this document.

Scion tC RES


Wire Harness Outline*

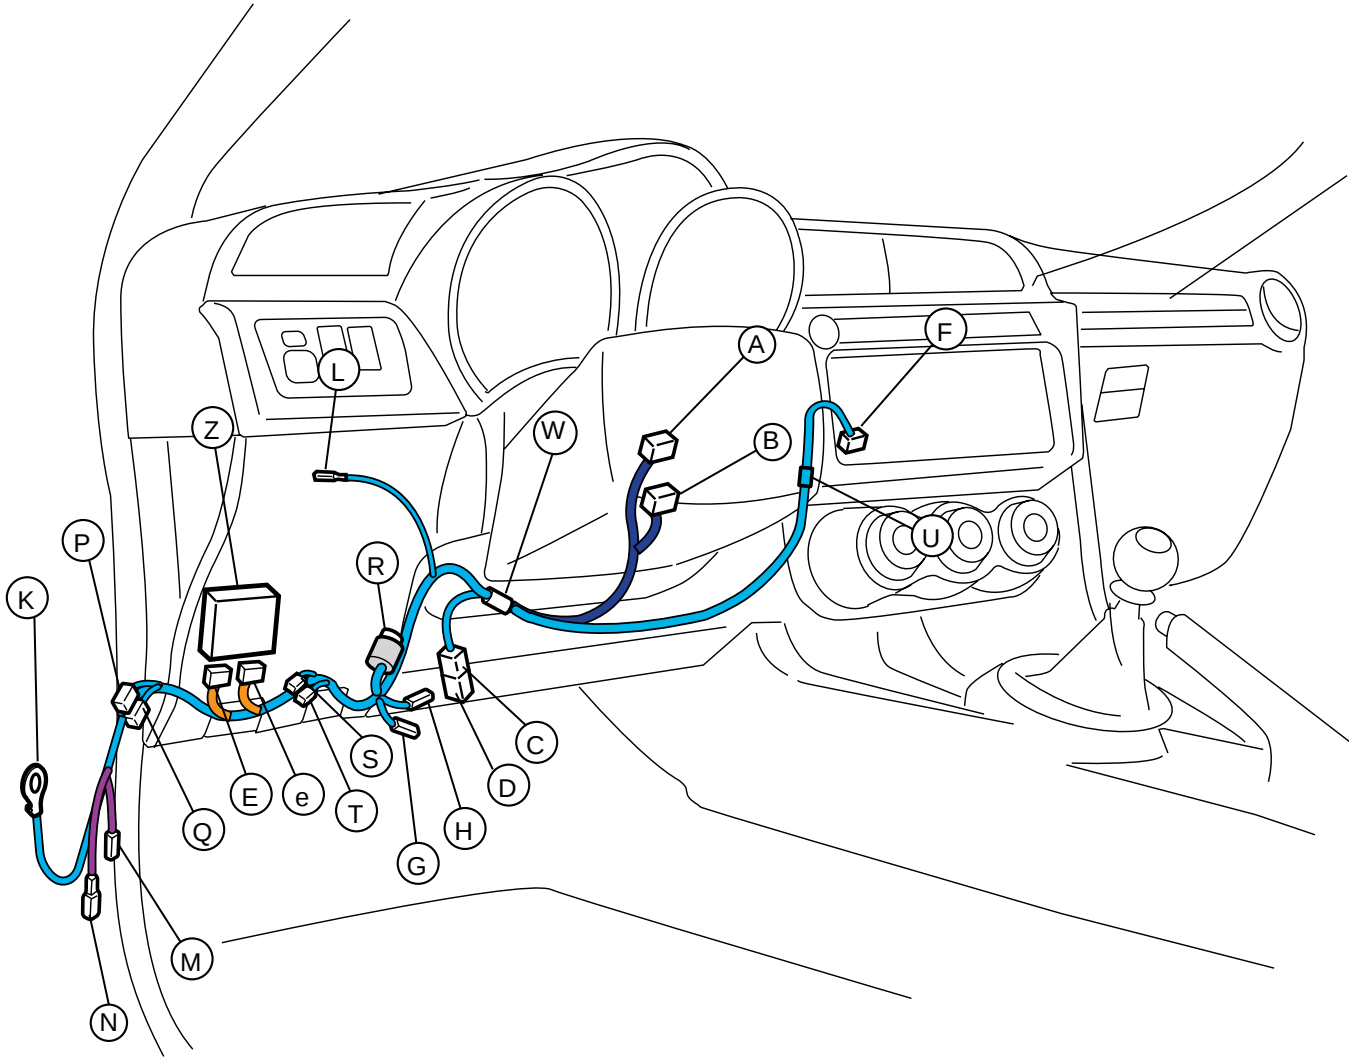

*Color of Harness on Overview corresponds with Colored Tape near Connectors on Harness.

TVIP	Vehicle	Description
A	C5	8P White
B	C5	8P White
C	—	2P White
D	—	2P White
E	—	24P White (for RES ECU)
e	—	8P White (for RES ECU)
F	C54	5P White
G	—	1P White
H	—	1P White
K	C1	Ground Terminal
L	2C	Wire Terminal (RED Wire)
M	—	1P White (for Registration)
N	—	1P White (for Registration)
P	—	Fuse
Q	—	Fuse
R	—	Relay
S	—	Fuse
T	—	Diode
U	—	Sky Blue Tape Marker
W	—	White Tape Marker
Z	—	RES ECU


Wire Harness Outline* (Engine Compartment)

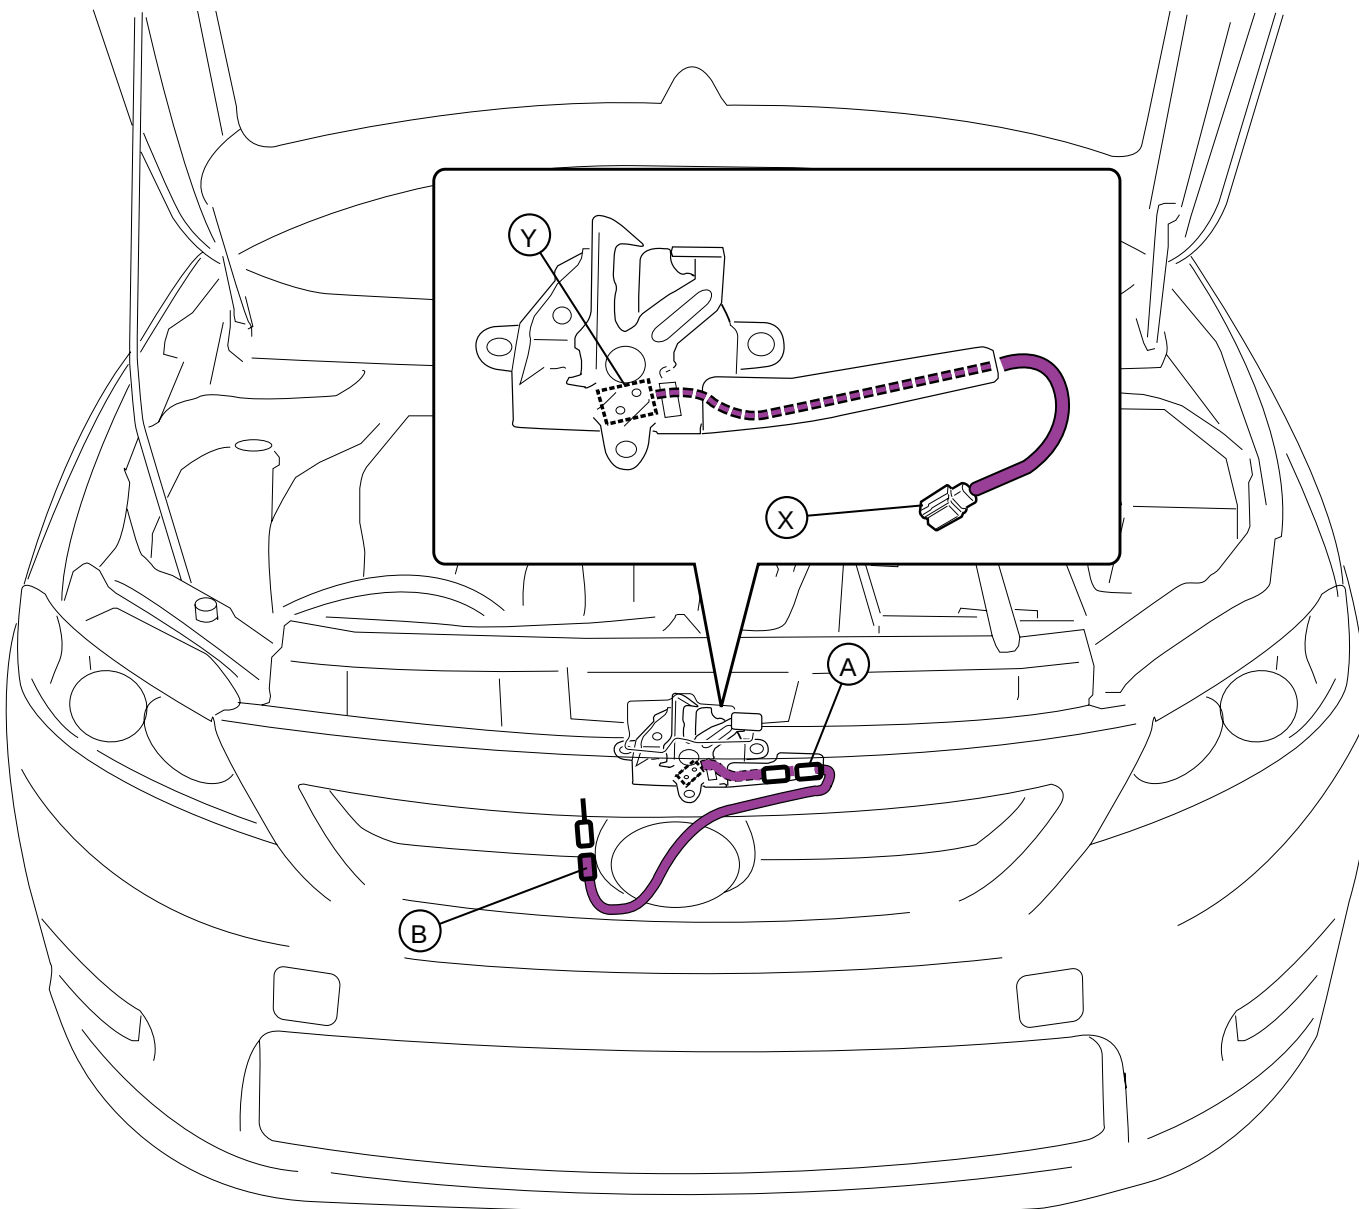

***Color of Harness on Overview corresponds with Colored Tape near Connectors on Harness.**

[illegible]

Disassembly Overview

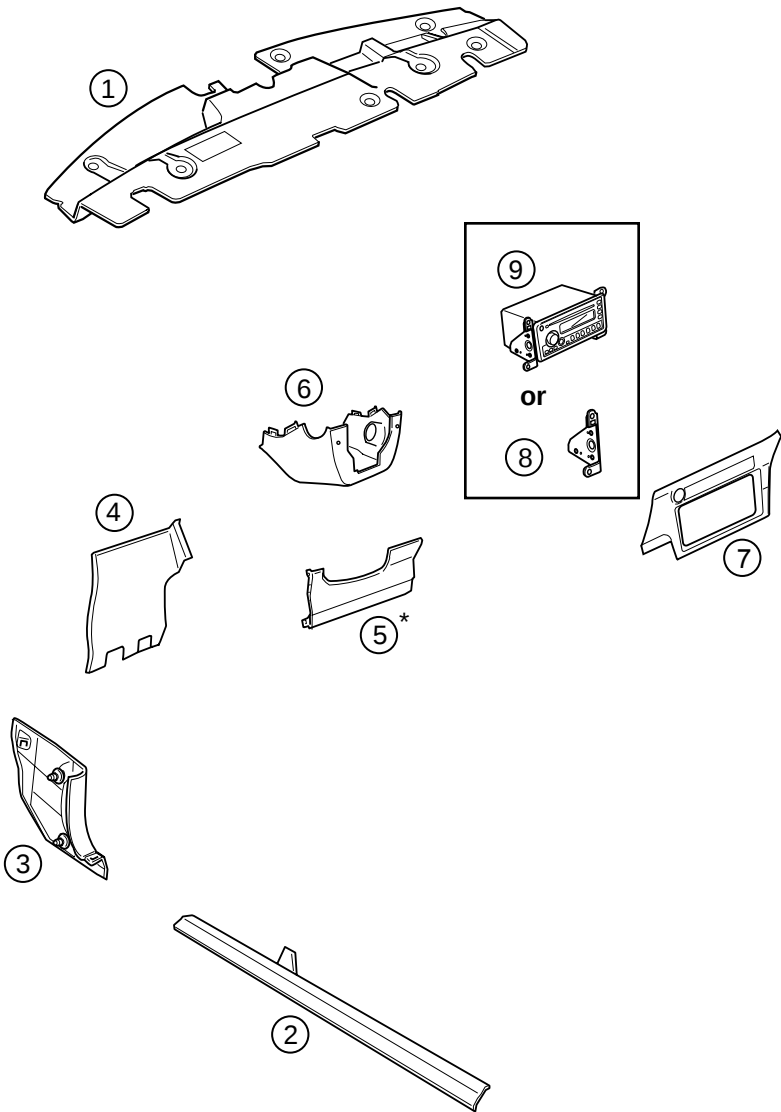

1	Engine Cover
2	DS Step Cover
3	DS Cowl Cover
4	DS Lower Dash Side Panel
5	DS Knee Airbag * Do not disconnect Airbag Connectors
6	Lower Steering Column Cover
7	Center Cluster Panel
8	Audio Bracket
9	Audio Unit (if equipped)



Disconnect all Corresponding Connectors.

1. Preparation.
- a. Verify that the Short Pin is installed.

• If not install now.

2. Hood Switch Installation.

- a. Place the Vehicle in Park with the Parking Brake set.
- b. Disconnect the Negative Battery Terminal.
 - Note the Battery Cable Position as it will be re-installed in the same position.



CAUTION: Do not touch the Positive Terminal.

- c. Remove the Vehicle's Engine Cover.
 - Remove 6 Clips.

- d. Dislodge the Hood Latch Assembly.
 - Remove 3 Bolts.

- e. Remove the Hood Latch Cable from the Hood Latch.



Make sure to hold the Hood Switch by its sides.



Make sure the Hood Switch Lever is positioned properly.



If the Hood Switch is Broken RES will not function.

- f. Release the Spring from the Hood Latch.
- g. Install the Hood Switch with the Switch Lever underneath the Hood Latch Trigger Lever.
- h. Reinstall the Spring to the Hood Latch.

- i. Route the Hood Switch Sub-Harness as shown.
- j. Connect the Hood Switch Sub-Harness Connector to the Vehicle's Pre-Connector.

- k. Secure the 2P Connectors to the Vehicle Harness with 1 Wire Tie.

- l. Secure the Hood Switch Sub-Harness to the Bottom Hole of the Vehicle's Brace using 1 Wire Tie.

- m. Connect the Hood Switch 2P Connector to the Hood Switch Sub-Harness 2P Connector.
- n. Wrap the 2P Connectors with 1 Foam Tape.

- o. Reinstall the Hood Latch Cable to the Hood Latch Assembly.

- p. Reinstall the Hood Latch Assembly.

- Position the Bottom Hood Lock mount behind the Vehicle Brace.



NOTE: Make sure to Torque the Bolts to 70.8 in•lbf (8.0 N•m) in the specified order.

- q. Route the Hood Switch Harness underneath the Hood Latch Assembly.

- r. Secure the Hood Switch Harness to the Hood Latch Assembly with 1 Wire Tie.



CAUTION: Make sure not to secure Hood Latch Cable with Hood Switch Harness.

3. Disassembly.

- a. Remove the Driver's Side Step Cover.
 - Disengage front inner sill clip and front clip.
 - Disengage rear inner sill clip and rear clip.
 - Hold ends up keeping guide pins up and slide sill forward to disengage remaining clips.



NOTE: Make sure to carefully follow steps above to avoid breaking sill plate clips.

- b. Remove Driver's Side Cowl Cover.

- c. Remove the Driver's Lower Dash Side Panel.
 - Open the DTC Connector Cover.

- d. Remove the Lower Steering Column Cover.
- Use a Flat Blade Jeweler's Screwdriver wrapped with Electrical Tape to release the clips.
 - Insert the Key into the Ignition and turn it to on.
 - Turn the Steering Wheel from Right to Left to access the Holes.
 - Dislodge the back Clips on both sides.
 - Release the Front Clips on both sides.

- e. Dislodge the Driver's Knee Airbag carefully.
- Remove 4 Bolts



CAUTION: Do not disconnect the Airbag Connectors.



- f. Wrap the Airbag in a Blanket or the like and place it on top of the TVIP box.



CAUTION: Position the Airbag as to Prevent stress on the Airbag Harness.

- g. Remove the Center Cluster Panel.

- h. Remove the Driver's Side Audio Bracket.
 - Remove 2 Bolts.

IF EQUIPPED w/AUDIO UNIT

- i. Remove the Audio Unit.
 - Remove 4 Bolts.

4. V4 Harness Installation. (Steering Area and Driver's Side)

V4 ONLY

- a. Secure the V4 Harness's White Tape Marker to the Vehicle Harness right next to the Harness Clamp with 1 Wire Tie.

- b. Secure the 2P Connectors to the Vehicle Harness with 1 Wire Tie.

Go to step n.


V5/V4 ADD-ON ONLY

- c. Cut the Wire Tie securing the V5 8P Connectors.
- d. Cut 4 Wire Ties securing the V5 Harness.
- e. Disconnect the V5 8P Connector from the Vehicle's 8P IG Connector.
- f. Disconnect the Vehicle's 8P Connector from the V5 Harness's 8P Connector.

- g. Cut 2 Wire Ties securing the V5 Harness.

- h. Disconnect the V5 2P Connectors.
- Discard the V5 Male 2P Connector's Harness.

- i. Remove the Tape securing the V4 2P Connector.
- j. Disconnect the 2P Connector from the V4 Harness.
- Discard the 2P Jumper Connector.

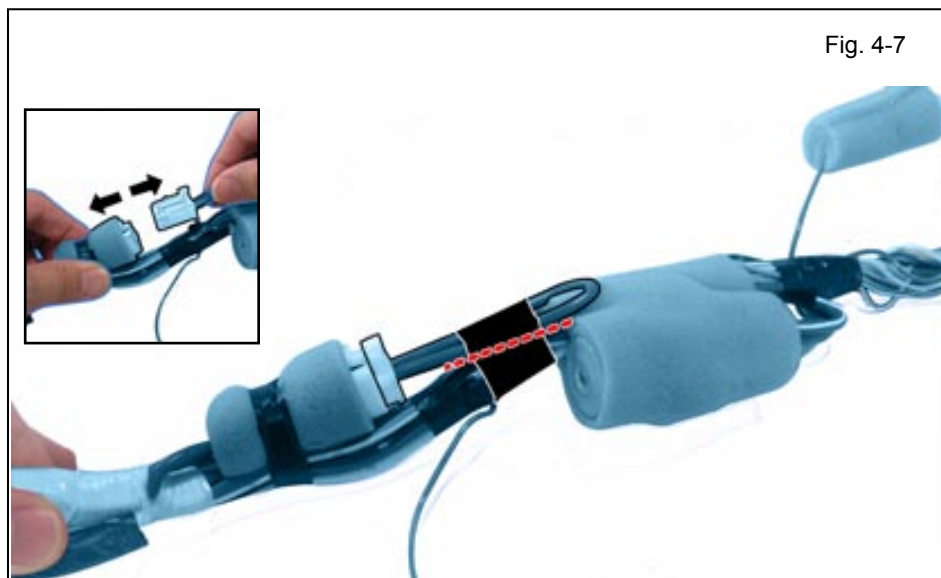

- k. Connect the V4 Male 2P Connector to the V5 Female 2P Connector.

- I. Secure both the V4 and V5 Harness's White Tape Markers to the Vehicle Harness right next to the Harness Clamp using 1 Wire Tie.

- m. Secure the 2P Connectors to the Vehicle Harness with 1 Wire Tie.

- n. Fully extend the Steering Wheel Column.
 - Release the Tilt and Telescopic Lever.

- o. Route the V4 Harness's 8P Connectors towards the Steering Column Area.
- p. Secure the V4 Harness to the Vehicle Harness with 1 Wire Tie.



CAUTION: Make sure the V4 Harness is not placed between the Vehicle Harness and the Steering Motor.

- q. Disconnect the Vehicle's 8P IG Connector.

- r. Plug the V4 8P Connectors in between the Vehicle's 8P Connectors.

- s. Secure the 8P Connectors to the Vehicle Harness with 1 Wire Tie.
- Bundle up the 8P Connector and Harness as shown.



CAUTION: Make sure not to include the Yellow Airbag Wires when securing the 8P Connectors.

- t. Secure the V4 Harness to the Vehicle Harness with 3 Wire Ties.



NOTE: Place the V4 Harness parallel to the Vehicle Harness.

- u. Disconnect the Vehicle's 1P Pre-Connector located on the right side of the Junction Box.

- v. Connect the V4 Harness's 1P Connectors in between the Vehicle's 1P Connectors.

- w. Secure the 1P Connectors and Relay to the Vehicle Harness with 2 Wire Ties.



- V4 Relay should be secured to the Vehicle Harness as shown.
- x. Route the V4 Harness's RED wire toward the front of the Junction Box.

- y. Locate and Disconnect the Vehicle's 48P Connector from the Junction Box.

- Release the Black Connector Lever.

- z. Remove the Black Connector Lever.

- Release the lock on both sides of 48P Connector.



CAUTION: Do not force the lever.

aa. Lift the Terminal retainer Clip.



CAUTION: Do not pull out the Retainer Clip.



ab. Insert the V4 Red Wire Terminal into the indicated location on the 48P Vehicle Connector.



VERIFY: Terminal Pins are properly inserted and do not come out.

ac. Close the Terminal Retainer Clip.

ad. Re-attach the Black Connector Lever.

ae. Reconnect the Vehicle's
48P Connector.

af. Secure the V4 RED Wire
to the Vehicle Harness with
1 Wire Tie.

ag. Secure the V4 RED Wire
to the Vehicle Harness with
1 Wire Tie.

5. RES ECU Preparation and Installation.


- a. Cut the Protective Sheet as shown.
 - Discard the Protective Sheet .

Fig. 5-2



- b. Attach RES ECU Bracket to the RES ECU.

Fig. 5-3

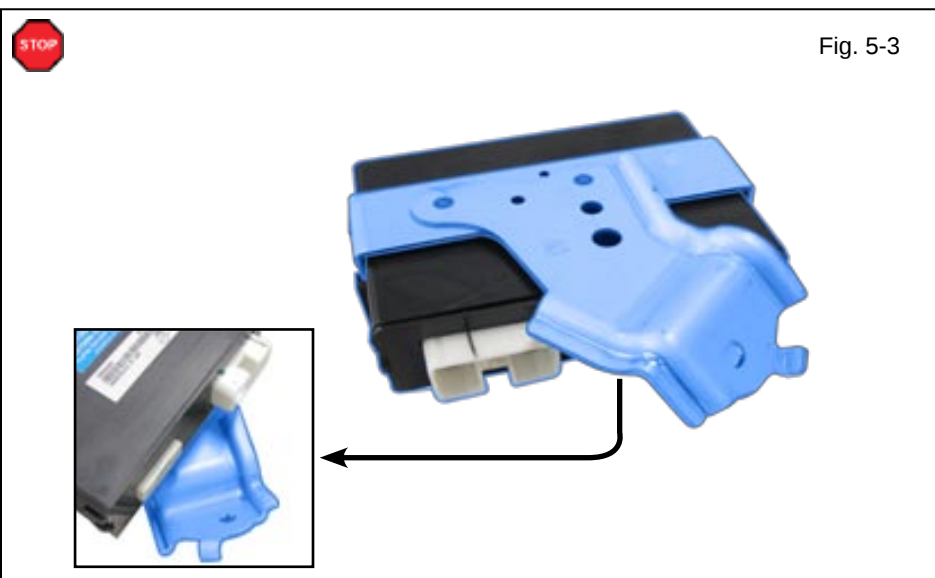

- c. Using VDC approved Cleaner and cleaning method, clean the area indicated on the ECU Bracket.
 - Do not clean the RES ECU.



- d. Attach the Protective Sheet  on the edge of the ECU Bracket as shown.



- Do not place sheet beyond the Red Line.
- Make sure the Protective Sheet adhere tenaciously to the surface of the Bracket.

- e. Attach the Protective Sheet  on the edge of the ECU Bracket as shown.



- Do not place sheet beyond the Red Line.
- Make sure the Protective Sheet adhere tenaciously to the surface of the Bracket.



- f. Position the RES ECU behind the Driver's side Junction Box as shown.

- g. Install the RES ECU to the Vehicle's Brace using the supplied Bolt.



NOTE: Make sure the Guide Pin is seated correctly.

**6. V4 Harness Installation.
(Driver's Side)**

- a. Plug in the V4 Harness's 24P and 8P Connectors to the RES ECU.

- b. Secure the V4 Fuses to the Vehicle Harness using 2 Wire Ties.

- c. Secure the V4 Harness to the Vehicle Harness using 2 Wire Ties.
 - Route the V4 Harness above the Hood Release Cable.

- d. Remove the Vehicle's Ground Terminal Bolt from the Driver's side Cowl Area.

- e. Secure the V4 Ground Terminal to the Vehicle's Ground Terminal using the same the Bolt.
- f. Secure the V4 Harness to the Vehicle Harness with 1 Wire Tie.

7. V4 Harness Installation. (Driver's Side ~ Center Area)

- a. Route the V4 Harness behind the Vehicle Brace toward the Center Cluster Area.

- b. Secure the V4 Harness's Sky Blue Tape Marker to the Vehicle's Brace with 1 Wire Tie.

V4 ONLY

- c. Connect the V4 5P Connector to Vehicle's 5P Pre-Connector located in the Center Cluster Area.

- d. Secure the 5P Connectors to the Vehicle Harness with 1 Wire Tie.
- e. Secure the V4 Harness to the Vehicle Harness with 1 Wire Tie.

NOTE: Make sure that the Audio USB Cable is not secured with the V4 Connectors.

Go to section 8.

V5/V4 ADD-ON ONLY

- f. Remove the Screw securing the V5 ECU.
- Do not discard the Screw.

- g. Cut the Wire Tie securing the V5 Harness.

- h. Remove the Tape securing the V5 Harness's Female 5P Connector.

- i. Connect the V5 Harness's Female 5P Connector to the V4 5P Connector.

- j. Secure the 5P Connectors to the Vehicle Harness with 1 Wire Tie.

NOTE: Make sure that the Audio USB Cable is not secured with V4/V5 Connectors.

- k. Reinstall the V5 ECU using the same Screw.

8. Reassembly.

- a. Reinstall the Driver's side Knee Airbag.
 - Install 4 Bolts.




NOTE: Make sure to tighten the Bolts to 88.5 in•lbf (10 N•m).

- b. Using VDC approved cleaner and cleaning method, clean the area indicated on the Lower Steering Column Cover.
- c. Apply 2 Foam tapes as shown.



NOTE: Do not perform above steps if Foam Tapes are already present.

- d. Reinstall the Lower Steering Column Cover.

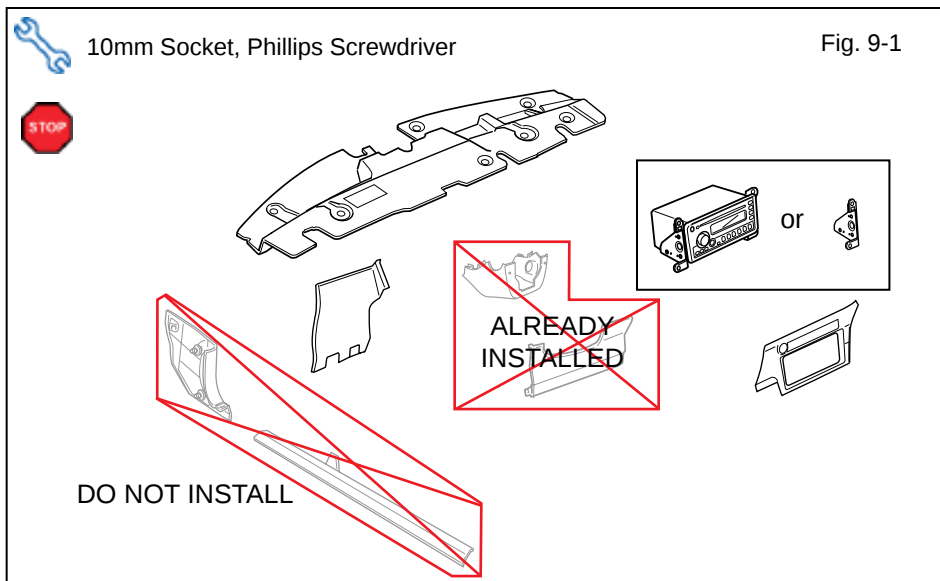

9. Registration Preparation.


- Reassemble the Vehicle except for the Driver's Cowl cover and Step cover.



Note: Make sure that all Connectors are reconnected.



Note: Verify that panels fit together properly, with no uneven gaps.

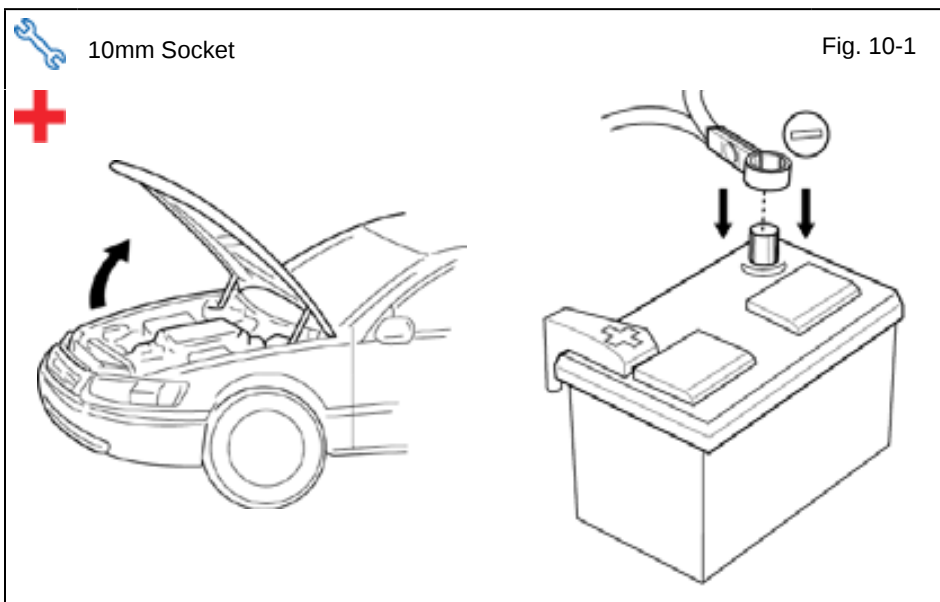


10. Registration.

- Open the Hood.
- Temporarily reconnect the Negative Battery Cable.



CAUTION: Do not touch the Positive Terminal.

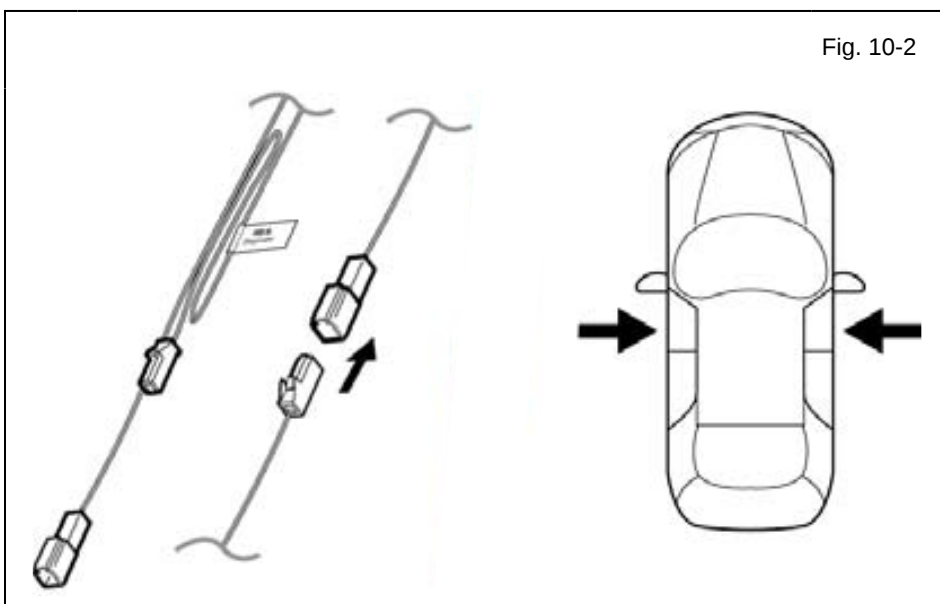


- Locate the 1P RES Diagnostic Connectors in the Driver's Side Cowl Area and connect them.

NOTE: Once connected you will have 10 minutes to complete this section, steps c-ad.

- Close all doors.

Fig. 10-3

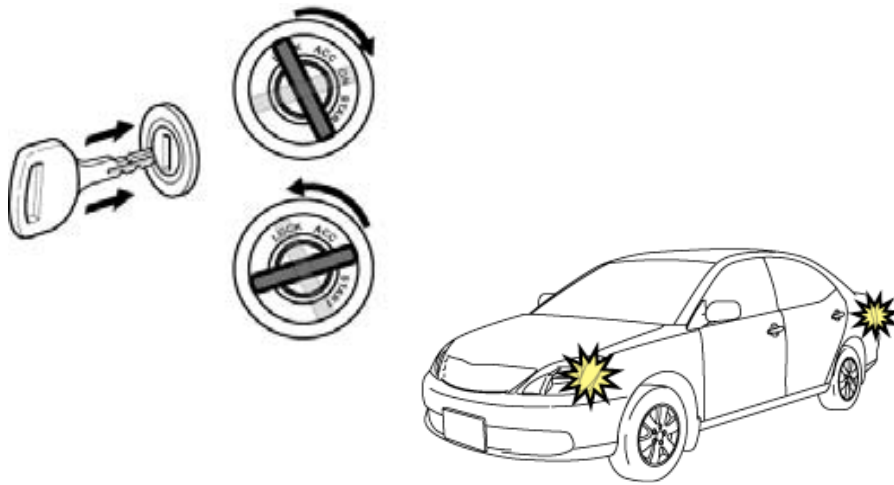


- e. Insert the Key into the Ignition.
- f. Turn it from "OFF" to "ON" 5 times.

LOOK: For the Hazard Lights to flash Once.

- g. Turn the Key to the "OFF" position.


Fig. 10-4

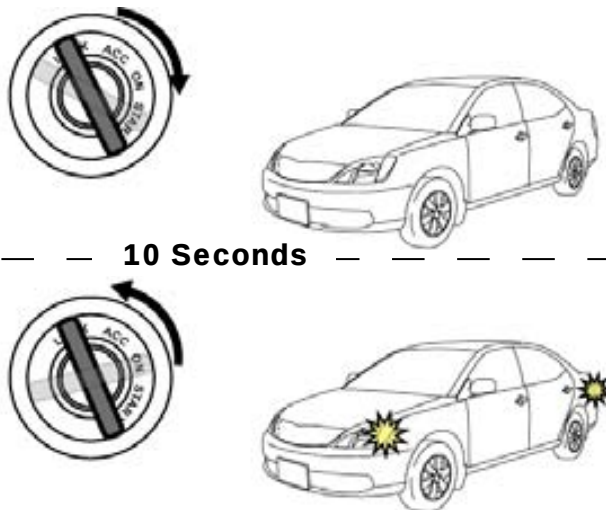

- h. Start the Engine.
- i. After 10 seconds stop the Engine.

LOOK: For the Hazard Lights to flash Once.

Fig. 10-5

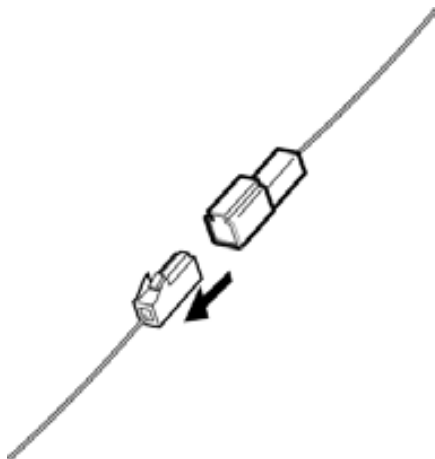

IF THIS PROCEDURE FAILED

The Hazard Lights won't flash or flashes Twice.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- Start again from step c.

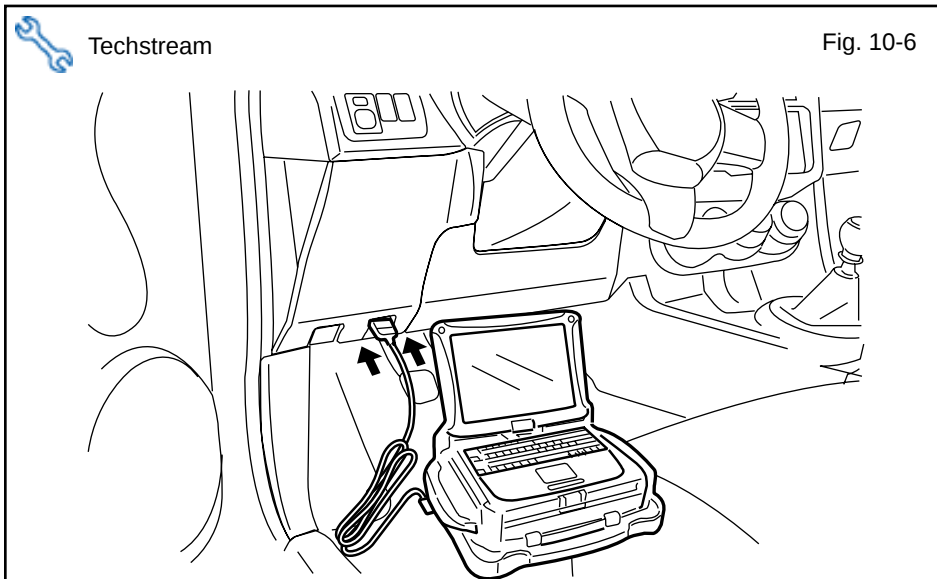


Fig. 10-6

- j. Connect the Techstream Notebook to the Vehicle's Diagnostic Port.
- k. Turn the Key in the Ignition to the "ON" position.

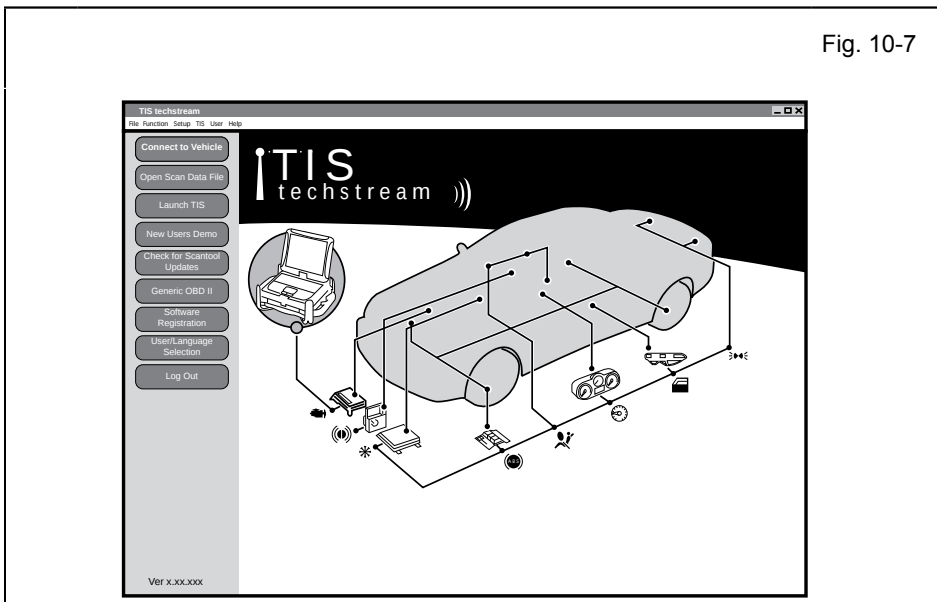


Fig. 10-7

- l. Start the TIS Techstream Application by clicking on the shortcut located on the Desktop.
- m. Click "Connect to Vehicle."


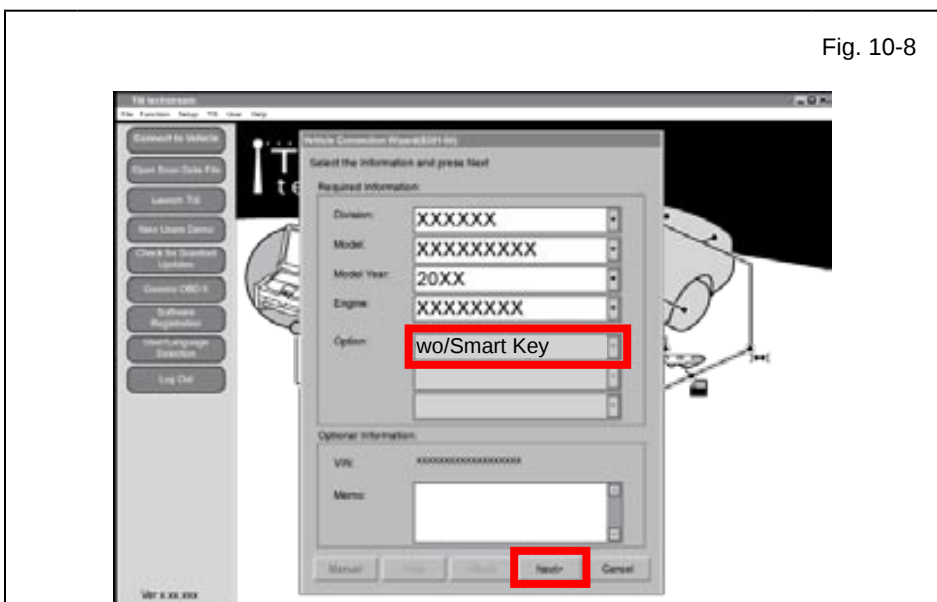


Fig. 10-8

- n. Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not verify that the Techstream is properly connected.
- o. Select w/o Smart Key.
- p. Click "Next>."


Fig. 10-9

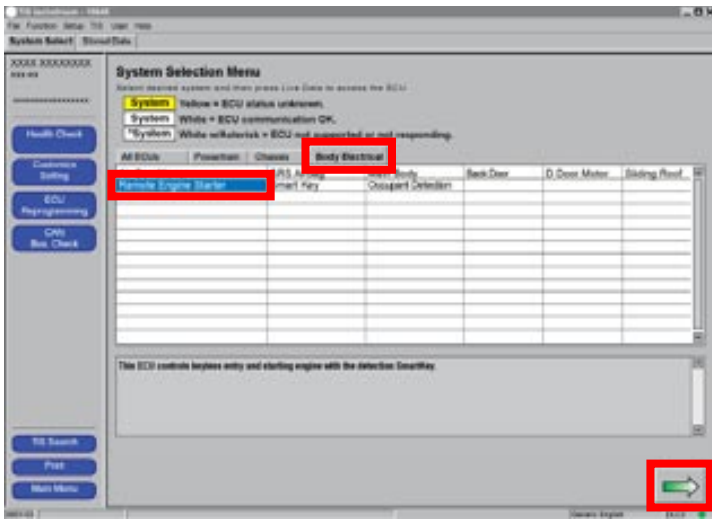

- q. Select "Body Electrical" tab.
- r. Select "Remote Engine Starter".

- s. Click .


Fig. 10-10

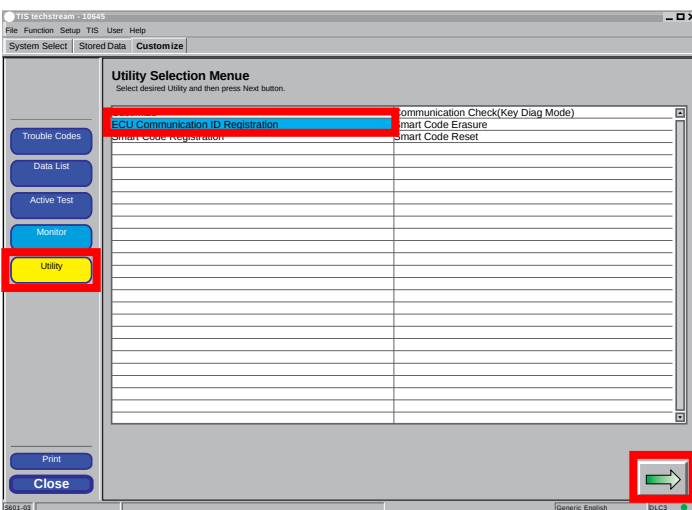

- t. Select "Utility."
- u. Select "ECU Communication ID Registration."


- v. Click .

Fig. 10-11

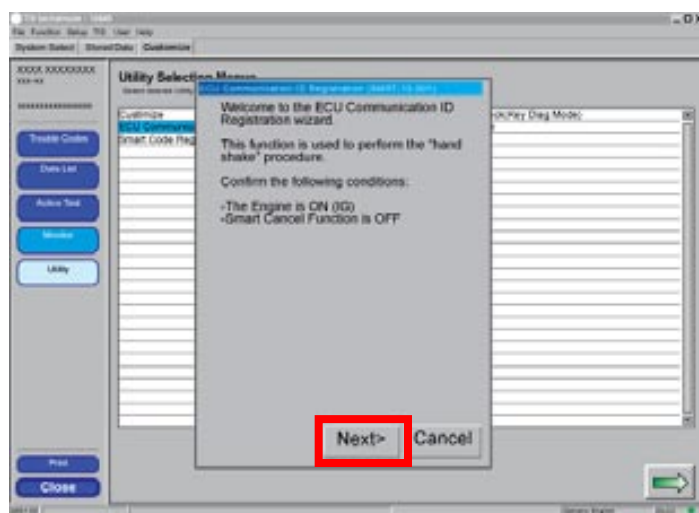


- w. Confirm the Conditions on the screen.
- x. Click "Next>."

Fig. 10-12

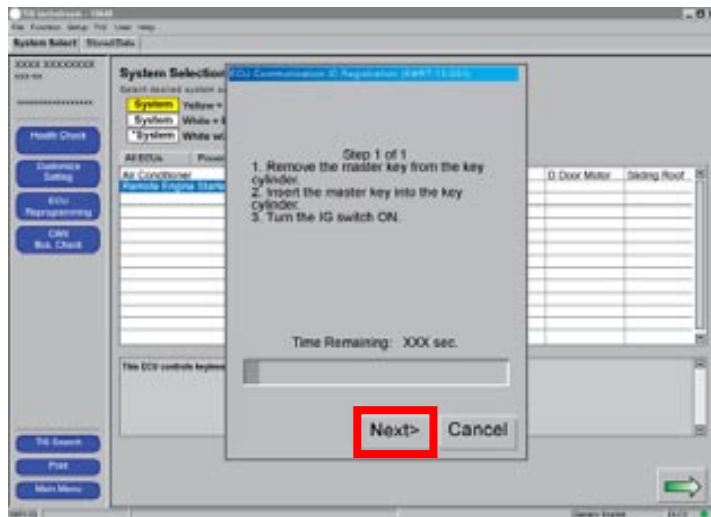


- y. Follow the steps on the Techstream.
- z. Click "Next>."

Fig. 10-13

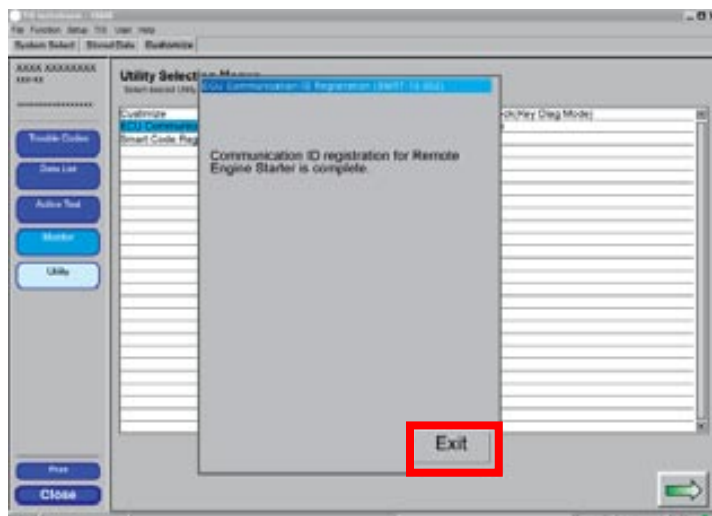

- CONFIRM:** That the ECU Communication ID was completed successfully.
- aa. Click "Exit."


Fig. 10-14

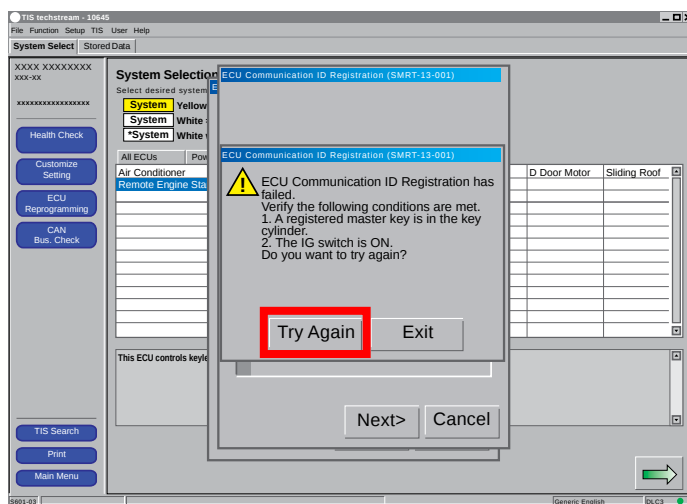

IF THIS PROCEDURE FAILED

- Click "Try Again".
- Start again from step u.

Fig. 10-15

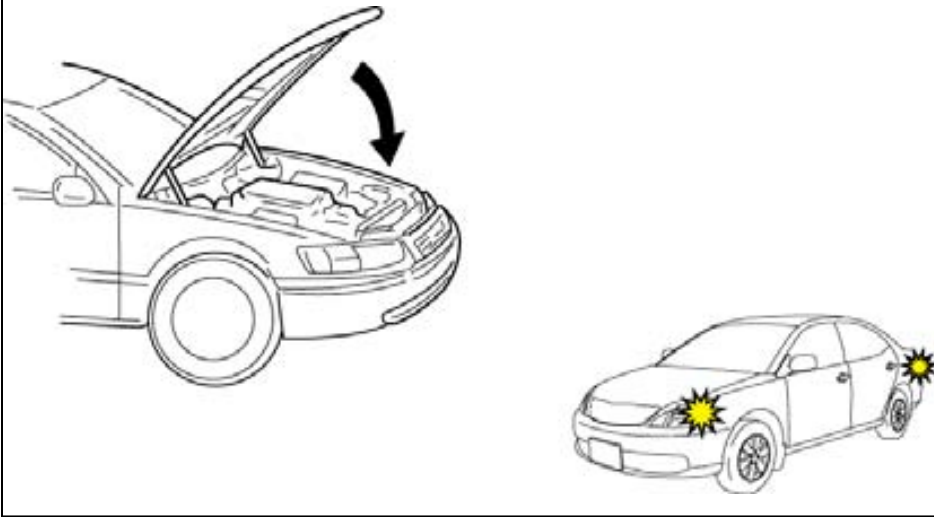

- ab. Exit the vehicle.
- ac. Close the Hood.
- ad. Look for the Hazard to flash Twice.

IF THIS PROCEDURE FAILED

The Hazard Lights flash Three Times.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- Start again from step c.

- ae. After a successful Registration, disconnect the 1P RES Diagnostic Connectors.
- af. Using Electrical Tape secure the 1P RES Diagnostic Connectors and Harness to the Vehicle Harness.

11. Tags and Labels.

- a. Using VDC approved cleaner and cleaning method, clean the area indicated in the Engine Compartment Cover.
- b. Attach the Engine Room Warning Label as shown.



CAUTION: Do not touch the adhesive surface.

- c. Using VDC approved cleaner and cleaning method, clean the indicated area on the key.
- d. Use a piece of Clear Tape to lift the label off its protective backing.



CAUTION: Do not touch the adhesive surface.

- e. Attach the Key Label as shown.
- f. Attach the Key Tag to the Key ring.

REPEAT: steps c–f with the other Key.

- g. Use Household Glass Cleaner to clean the inside of the Front Door Windows.
- h. Use a piece of Clear Tape to lift the Label from the protective backing.



CAUTION: Do not touch the adhesive surface.

- i. Attach the Label as shown.



NOTE: Make sure to Align according to Etching or Other Label.

REPEAT: steps g–i with the other Window.

12. Complete the Installation.

- a. Finish reassembling the Vehicle.



VERIFY: That panels fit together properly, with no uneven gaps.



VERIFY: That all Connectors are plugged in.

- b. Position the Negative Battery Cable at the original factory position.



- Tighten the Nut to 36 in•lbf (4.07 N•m)



CAUTION: Do not touch the positive terminal.

- c. Clean up and Remove trash.
- d. Sealed in its protective bag, place the Owner's Manual in the Glovebox.
- e. Reset the power windows.
 - Turn the ignition "ON."
 - Lower the Windows halfway.
 - Pull up on the Power Window Switches until the windows close.
 - Continue to hold up on the switches for a minimum of 1 Second.
- f. Reset the Moon Roof. (If equipped)
 - Turn the ignition "ON."
 - Open the Moon Roof halfway.
 - Push and hold the Moon Roof Switch to close until the Moon Roof closes.
 - Continue to hold the switch for a minimum of 1 Second.

Accessory Function Checks

Close the hood, enter the vehicle and close all doors. Place the shift lever in the “P” (Park) position, set the parking brake and make sure the Vehicle is off.

Perform		Look For
1	Press the remote control's lock button twice within 2 seconds, then press and hold the lock button for 3 seconds.	The hazard lights flash after 3 seconds. The engine starts. The hazard lights flash repeatedly for 10 seconds.
2	With the engine running, pull the hood release handle. NOTE: Some Vehicles may require you to exit the Vehicle and pull up on the Hood.	The engine stops. The hazard lights flash once. The security alarm triggers. (only if equipped with OE Factory Alarm, not Genuine Accessory alarm, and only if armed)
3	Move the shift lever out of “P” (Park). Attempt to start the Vehicle using the remote.	The engine does not start.

Vehicle Function Checks

Function	Function
----------	----------

Enter the Vehicle

☐ Dome/Courtesy Lights	☐ Steering Wheel Column Adjusts Without Interference
☐ Horn	

Start the Vehicle

☐ Starter	☐ Gauges
☐ Panel/Switch Illumination	☐ ABS Light (if equipped) <i>If the warning light remains on, it may indicate a system malfunction.</i> 
☐ Lamp Failure Sensor <i>If the warning light remains on, it may indicate a system malfunction.</i> 	☐ Track/Skid Control Light (if equipped) <i>If the warning light remains on, it may indicate a system malfunction.</i> 
☐ Seat Belt Warning Light <i>If the warning light remains on, it may indicate a system malfunction.</i> 	☐ Tire Pressure Monitoring System (TPMS). (if equipped) <i>Prior to TPMS activation and Pre-delivery Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on.</i> <i>After TPMS activation and PDS of the Vehicle the TPMS light will illuminate for a few seconds and go off when IG is turned on.</i> 
☐ Air Bag Warning Light <i>If the warning light remains on, it may indicate a system malfunction.</i> 	
☐ Cruise Control Light (if equipped) 	

Using a Mirror or Assistant check the following.

☐ Trunk/Tailgate/Bed Lights (if equipped)	☐ Tail Lights
☐ Brake Lights	☐ Daytime Running Lights (if equipped)
☐ Backup Lights	☐ Marker Lights
☐ Clearance Sonar (if equipped)	

Stop the Engine, Place the Vehicle's IG in the ON position.

☐ Hazard Lights	☐ Turn Signal Lights
☐ Head Light	☐ Fog Lights (if equipped)
☐ High Beams	☐ Accessory Controls/Illumination (if equipped)
☐ Power Side Mirrors (if equipped)	☐ Convenience Memory Settings (if equipped)
☐ Power Sliding Door (if equipped)	☐ Rear Sunshade (if equipped)

Function		Function	
☐	Front Wiper/Washer	☐	Rear Wiper/Washer (if equipped)
☐	Power Sun/Moon Roof (if equipped)	☐	Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)
☐	Clock (if equipped)	☐	Navigation System (if equipped)
☐	Audio/Video (if equipped)	☐	HVAC
☐	Steering Wheel Audio Control (if equipped)	☐	Rear Window Defogger (if equipped)
☐	Front Windshield Defogger (if equipped)	☐	Accessory Power Socket (if equipped)
☐	Side Mirror Defogger (if equipped)	☐	Heated/Vented Seats (if equipped)
☐	Massage Seats (if equipped)		
☐	Glovebox Light (if equipped)	☐	Passenger Air Bag Switch (if equipped)
☐	Power Locks (if equipped)	☐	Power Windows (if equipped)
☐	Power Seats (if equipped)	☐	Key Sensor Buzzer